

# K&P Lifetime Oil Filter

## Removal Instructions - Twist Lock Style

(Click on image for larger picture)

- 

1. Grasp the filter housing in one hand. To prevent scratching the filter housing use care when setting the filter on any surfaces. (a paper towel or small cloth works nice as a pad)
- 

2. Gently push the filter element straight down into the housing.
- 

3. Twist filter element 1/3 turn counter clockwise (to the left)
- 

4. Release the filter element. It should spring up through the 3 slots in the filter housing. You can now remove the filter element for inspection and cleaning

**Cleaning:** We recommend the K&P Micronic Stainless Steel Oil Filter be cleaned frequently when first purchased or when engine work has been performed. This will give you a feel for how much debris is being filtered out of your machines oil and help you decide how often you want to clean the filter for your application. At minimum, clean the filter with every oil change. Remember, oil is the lifeblood of your machine, keep it clean!

Wash the reusable stainless steel filter element in clean solvent, kerosene, aerosol carburetor cleaner or any other degreasing agent; even common dish soap and water. If inspection of trapped debris is desired, flush the particles into a light colored, clean container. Once clean, lightly blow air through the filter from the inside out to remove any small particles or cleaning agent from the screen. Finally, if you have a spin on model, clean the inside of the filter housing using the same type of cleaner as used on the reusable filter element.

### Motorcycle Performance Specialties

380 Orange Lane - Casselberry, Florida 32707

Phone: (321) 972-8282 - Fax: (321) 972-5123

Hours: 9am - 5pm, Monday - Friday

Sales E-Mail: [sales@mpsracing.com](mailto:sales@mpsracing.com)