



Line Lock Installation Instructions

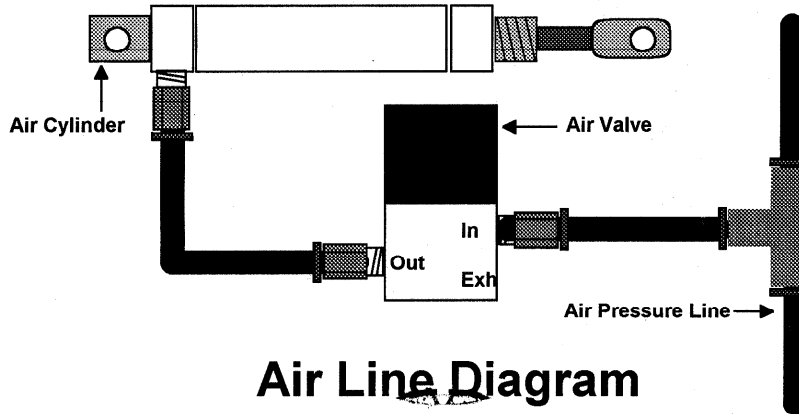


Air Line Diagram

All air line fittings are push in type. To use them be sure to cut the line square with a razor blade. Then push the line into the fitting until it stops then pull out locking it in place. To remove the line push down on the retaining ring then pull the line out. These fittings are reuseable and need no ferrules.

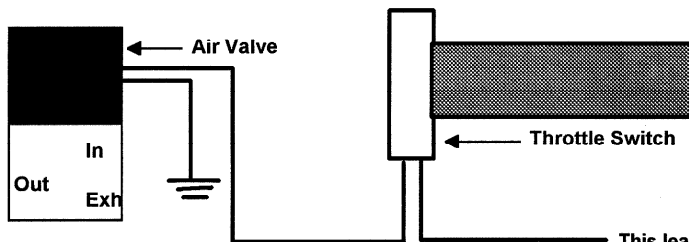

Wiring Diagram

This lead should be wired so that when the launch limiter is activated 12 volts are supplied. (This is usually through the clutch switch)

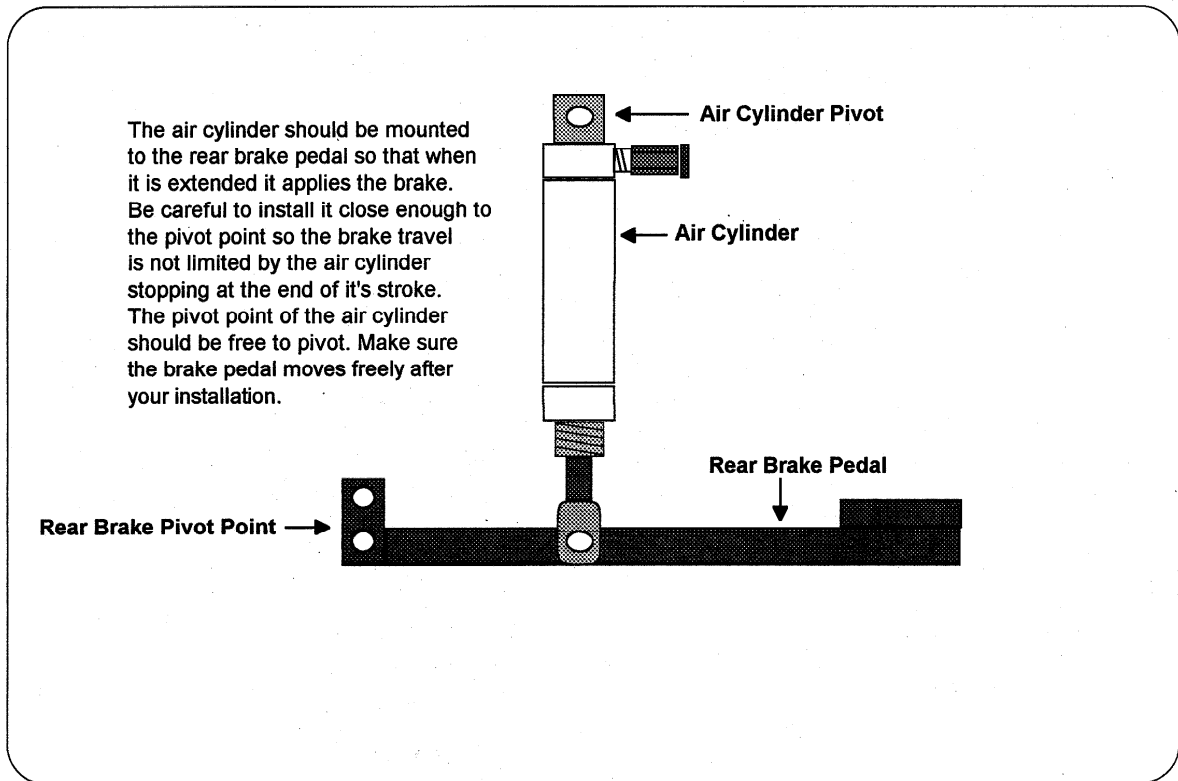

The Line Lock's primary function is to hold the back brake when activated to keep you from rolling. It can also be used to help control wheelspin. By placing a MPS Needle Valve in the exhaust port of the Electric Air Valve you can adjust the release speed of the line lock.