

**MPS Pro Pushbuttons Installation Instructions**




The MPS Pro Pushbutton is a precision switch; therefore care should be taken to insure proper installation. All MPS Pro Pushbuttons are for 7/8" handlebars. After sliding the Pro Pushbutton to the proper position on the handlebar, lock it in place with the setscrew.

To change the direction the wires exit the back of the housing you must disassemble the Pro Pushbutton.


- Pull the button from the switch shaft.
- Unscrew the guard from the switch.
- Remove the switch from the back of the housing.
- Replace the switch with the wires facing the proper direction.
- Screw the guard back in place.
- Push the button back on the switch shaft.

**Button Assembly**

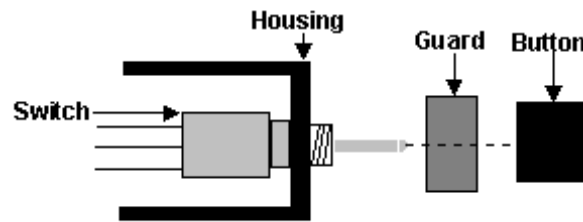

**Warning: Do not pull on the switch wires! Pulling the switch wires will result in a broken switch!** We recommend looping the wires back carefully to the handlebars and zip tie them in place. This will give the wires some strain relief.

**Electrical Information**

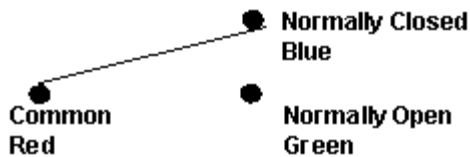

The Pro Pushbutton switch is a single pole double throw type. The wire colors for the Pro Pushbutton switch are as follows: red – common, blue – normally closed, and green – normally open. When the Pro Pushbutton is at rest the red and blue are connected. When the Pro Pushbutton is pushed in the red and green are connected.

If you have any more questions we have a Frequently Asked Questions page at our web site as well as the telephone tech support. Thank you for your purchase of this MPS product. All products sold by MPS are for use at closed course competition events and not for use on public streets or highways.

**Phone: 321.972.8282 – Fax: 321.972.5123  
 380 Orange Lane – Casselberry, Florida 32707**