

FDP STARTER RELAY
PN 00-00-0525

Parts Included:


- | | |
|------------------------|------------------------|
| 1 - Relay | 2 - 8-32 Brass Nuts |
| 4 - Ring Lug Terminals | 2 - 1/4" Brass Washers |
| 2 - 1/4"-20 Brass Nuts | |

WARNING: During installation, disconnect the battery cables. When disconnecting, always remove the Negative cable first and install it last.

The FDP Starter Relay may be mounted in any position and should be kept away from direct engine heat sources. Position the Relay and mark the location of the two mounting holes. Use a 1/4" bit and drill the holes. Use 1/4"x 1" stainless steel hardware (not supplied) to retain the relay.

WIRING

The FDP Relay requires a separate ground wire that must be connected to the negative terminal of the battery. The two heavy terminals on top are responsible for carrying the high current load from the battery to the starter. One smaller terminal connects across the starter switch to the battery terminal to activate the Relay while the other small terminal must be connected to ground at battery negative.

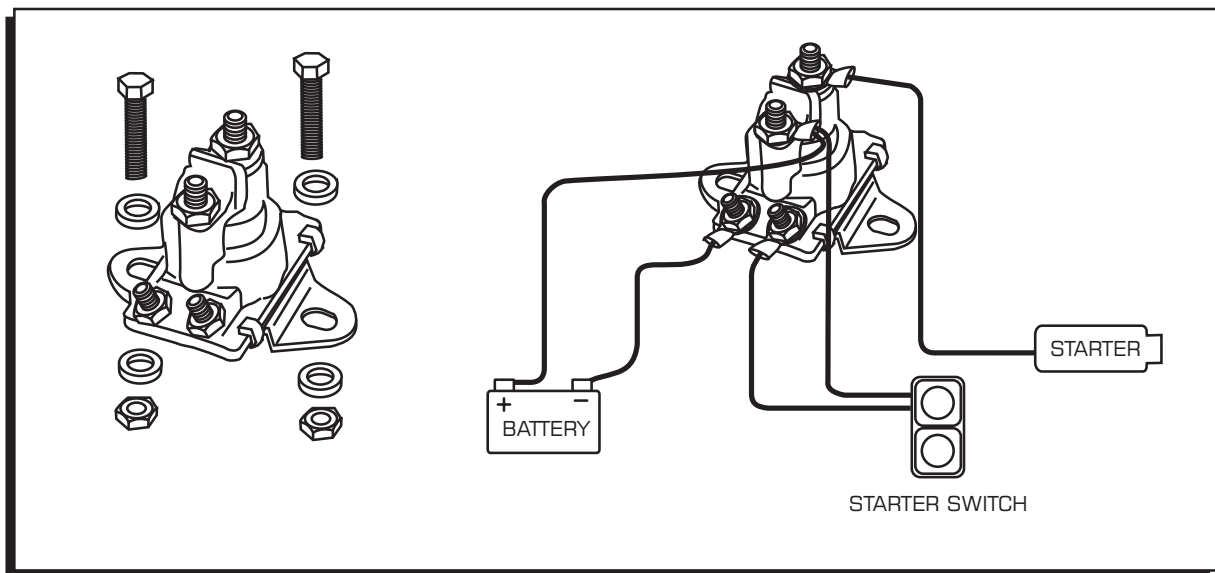

Wiring the FDP Starter Relay

Service

In case of malfunction, this component will be repaired free of charge according to the terms of the warranty. When returning components for service, Proof of Purchase must be supplied for warranty verification. After the warranty period has expired, repair service is charged based on a minimum and maximum charge.

Send the unit prepaid with proof of purchase to the attention of: **Customer Service Department, Factory Direct Performance, 1355 Pullman Dr., El Paso Texas 79936.**

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle.

The repaired unit will be returned as soon as possible after receipt, COD/Cashiers Check for any charges. For more information, call the FDP Customer Service Line **(915) 858-3365**. FDP technicians are available from 8:00 a.m. to 5:00 p.m. Monday - Friday (Mountain Time).

Limited Warranty

Factory Direct Performance warrants this product to be free from defects in material and workmanship under its intended normal use* and if properly installed, for a period of one year from the date of original purchase. If found to be defective as mentioned above, it will be repaired or replaced at the option of Factory Direct Performance. Any item that is covered under this warranty will be returned free of charge through standard shipping methods. If faster service is required the customer has the option of paying for this service.

This shall constitute the sole remedy of the purchaser and the sole liability of Factory Direct Performance. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Factory Direct Performance or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by Factory Direct Performance. Any modifications to this item or if it is used on an application other than what Factory Direct Performance markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. Factory Direct Performance will accept no liability for custom applications.